


# Solatube® SolaMaster® Series Security Bar Installation Instructions

Please read all warnings and instructions before beginning the installation.

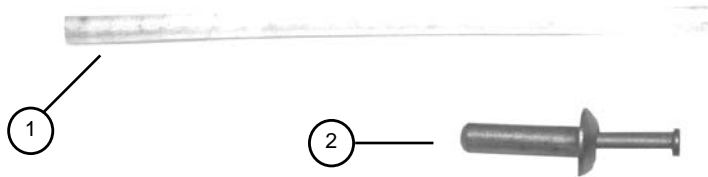

## PARTS LIST

	Quantity
1. Security Bar	1
2. Wedge Anchor	2

### Required Tools:

1. Electric Drill	2. 7/16" Drill Bit	3. Hammer
4. Silicone Sealant		

**Overview:** These instructions only address the mounting of the Security Bar to the 21" Solatube skylight flashing. Complete installation of the top tube assembly and LITD for the 21" Solatube are available with the each unit or online at [www.solatube.com](http://www.solatube.com). Follow all warning and safety information in 21" Solatube installation instructions.

## ASSEMBLY AND INSTALLATION INSTRUCTIONS:

**Step 1.** Use dome as a template to mark Security Bar hole locations. Place dome over flashing until it rests evenly on dome ring. Choose two dome holes directly across from each other that do not align with LITD mounting tabs. Mark the hole locations onto flashing turret through dome holes with marker (**Diagram A**). Remove dome.

**Step 2.** Drill 7/16" hole through flashing turret, dome ring and top tube at each marked location (**Diagram B**).

**Step 3.** Insert one wedge anchor into end of Security Bar. Being careful not to damage free end of bar, stand bar on solid surface and hammer wedge pin of anchor in flush.

**Step 4.** Slide the free end of Security Bar through one hole, passing through the center of the flashing, and out the opposite hole until head of anchor contacts flashing turret (**Diagram C**).

**Step 5.** Place a solid, heavy object against head of anchor. Insert remaining anchor into free end of Security Bar and hammer wedge pin of anchor in flush (**Diagram D**).

**Step 6.** Seal anchor head to flashing with silicone sealant (not included). Return to 21" standard installation instructions to complete install.

